Autex Acoustics

Autex Acoustics® x Willie Weston

These install instructions are of a general nature and are to be referred to when installing Autex Acoustics[®] x Willie Weston panels. Please refer to the Cube[™] and Quietspace[®] Panel Install Instructions, and the Autex Acoustics x Willie Weston Collection Guide as well as the below instructions.

These install instructions are designed to assist suitably experienced tradespeople in the installation of Autex Acoustics x Willie Weston panels to a high standard in common wall and ceiling applications.

For installation support, contact your Autex Acoustics account manager before you start.

Autex Acoustics recommends that all persons engaged in the installation of Autex Acoustics x Willie Weston panels have full knowledge of the product and installation procedure as set out in the most recent edition of the manufacturer's instructions and related documents. Copies of these documents are available on request or from the Autex Acoustics website.

Manufacturer's documents	 Manufacturer's documents relating to work in this section are: Cube™ Install Instructions Quietspace® Panel Install Instructions Autex Acoustics x Willie Weston Collection Guide 	
Inspection	Before starting the installation of Autex Acoustics x Willie Weston panels, check that the materials have been supplied as ordered and are free from damage or faults. Check colours and product labels to ensure the product has been supplied correctly. No claims will be accepted where the job continues with obvious faults and no consultation with Autex Acoustics has taken place.	Due to the nature of the raw material and the manufacturing process, flecks, and other small surface blemishes may be visible on the surface of Autex Acoustics panels from time to time. This is an inherent characteristic of the textile products and is unavoidable.
Transportation, storage, and handling	Autex Acoustics x Willie Weston panels must be transported, stored, and handled with care. Autex Acoustics x Willie Weston panels should be kept dry and stored indoors. Avoid delamination or distortion, and protect edges from being crushed. Do not accept damaged product. If the product arrives damaged, note the condition on the freight documents and contact Autex Acoustics immediately.	Goods signed as received in 'good condition' will not be the responsibility of Autex Acoustics. Always transport and store Autex Acoustics x Willie Weston panels on a flat, clean, and dry surface.
Wall and surface preparation	Before work commences, all joins, gaps, and cracks in the wall/ceiling substrate must be taped with proprietary sealing tapes to eliminate the ingress of dust and foreign particles travelling from the cavity into the installed product over time. Ensure that the substrates, backgrounds, and adjoining surfaces will allow work to reach the required standard. Autex Acoustics recommends that the wall/ceiling surfaces be prepared to a minimum level three finish.	Surfaces must be sealed prior to applying the adhesive. Gloss and semi-gloss finishes should be lightly sanded and dusted clean prior to application of the adhesive. All surfaces must be clean, dust-free, and dry, as dust and moisture will adversely affect the adhesive and may result in lack of adhesion.

Autex Acoustics recommends a contact-type adhesive or high grab MS polymer adhesive for applying Autex Acoustics x Willie Weston panels to most common substrates. Prior to commencing work, we recommend contacting your local adhesive supplier with samples of the Autex Acoustics or Quietspace Panel and the specification of the substrates you are installing to. It is the installer's responsibility to ensure that any adhesive is fit for the intended purpose. It is	Please take extra care when using adhesives as the printed side of the panels cannot be cleaned with a citrus cleaner in the way our standard products can. We recommend using a guard to avoid overspray. Fit the product to the wall and apply pressure by hand. Apply even pressure to ensure adequate
also the installer's responsibility to ensure that the substrate is fit for the application of adhesives and Autex Acoustics x Willie Weston panels. For information regarding adhesive suppliers, please contact your Autex Acoustics account manager.	adhesive transfer and a strong bond. Be careful not to abrade the surface when making contact with Autex Acoustics x Willie Weston panels. Do not use a roller to apply pressure on the surface.
In situations where Autex Acoustics x Willie Weston panels are to be installed to create a specific repeated pattern, please be sure to follow the Autex Acoustics x Willie Weston Collection Guide document, and follow these instructions with regards to join placements and layouts. Please take extra care to ensure the pattern is joined at the correct points to create a seamless finish. Joins should ideally always be vertical, clean, and flat with no gaps or visible compression marks. Panel join options are detailed below.	We recommend cutting through the printed face of the panel using a straight edge to ensure a straight cut. The panels will be shipped with a protective offcut to prevent the edge being damaged. The offcut also contains the identification of each panel to ensure the correct panel repeat.
14 mm 14	4 mm + H + H + H + H + H + H + H + H
U channel	Spine finish (25mm Quietspace® Panel only)
Buttion	Negative detail
	<text><text><text><image/><image/></text></text></text>

Installing Autex Acoustics x Willie Weston panel	Autex Acoustics x Willie Weston panels should always be installed in accordance with these install instructions, and as per the specification detail and customer requirements. If there is conflicting information, you must seek clarification from all appropriate parties before proceeding with the work. It is imperative that the installation is planned before cutting any product. We recommend that you "measure twice and cut once". For further information, please refer to the Cube or Quietspace Panel install instructions. Do not rub the panel surface at any point during installation as rubbing may cause surface wear. Do not step on the panel surface. Avoid scratching the panel surface. Autex Acoustics x Willie Weston panels should be installed in low non-contact areas to avoid damage to the surface. If you have any concerns about the install location, please contact your account manager.	Joins should ideally always be vertical, clean, and flat with no gaps or visible compression marks (refer to panel join options on previous page). Panels will be manufactured ready for butt joining along the vertical joins. Lay a drop cloth on the floor when removing the product from its packaging to protect the panel surface from any contamination and friction. Avoid contaminating the panel surface with adhesive, solvents, or any other chemicals during installation. In the case of adhesive spills or surface contamination, do not clean the surface with any liquid. Consult a specialist cleaning company immediately.
Fixtures	Remove cover plates, light fittings, and other fixtures as the work proceeds. Replace, plumb, square and true to line as the work is completed.	Note: All electrical plumbing, fire safety appliances, and fittings should only be removed and reinstalled by an appropriately qualified person.
Penetrations	The fire and acoustic performance of walls and ceilings can be reduced by penetrations for plumbing, electrical switches, light fittings, etc. For walls or ceilings that require a Fire Resistance Level (FRL) and/or are acoustically sensitive, it is recommended that, wherever possible, such penetrations are avoided. Where penetrations are necessary, only appropriately rated proprietary sealants and fittings should be used.	If unsure, we recommend consultation with the appropriately qualified person is undertaken to ensure the buildings performance objectives are maintained.
Heat generating devices	Localised high temperature conditions may be present in the following situations, which may be detrimental to wall and ceiling linings:	For more information, refer to the current documents below: • NCC provisions for installation of heating
	Including, but not limited to:	appliances, fireplaces, chimneys, and flues
	Radiant heaters	 AS 2918 Domestic solid-fuel burning appliances—Installation
	Lighting	AS 5601 Gas installations
	Heat pumps	• AS/NZS 3000
	Reverse cycle air conditioners	Unit manufacturer installation instructions
	Solid fuel stoves	All appliances including lamps, luminaires, and their associated ancillary gear should be installed so as not to cause the product surface temperature to rise above 80°C.

On completion

Leave work to the standard required by following all listed procedures. Leave work secure, smooth, and free of air bubbles, wrinkles, gaps, stains, and blemishes. Remove debris, unused materials, and waste from the site.



Service

For more information, contact your Autex Acoustics account manager or visit our website www.autexacoustics.com.au

New Zealand

702-718 Rosebank Rd Private Bag 19988 Avondale 1746, Auckland New Zealand Freephone 0800 428 839 Phone +64 9 828 9179 Fax +64 9 828 5810

Australia

285 Swan St, Richmond, VIC 3121, Australia Freephone 1800 678 160 Phone +61 3 9450 6700

United Kingdom

Unit J4, Lowfields Way Lowfield Business Park, Elland, West Yorkshire HX5 9DA United Kingdom Phone +44 0 142 241 8899

United States

1630 Dan Kipper Drive, Riverside, CA 92507 United States of America Phone +1 424 203 1813

Autex is an ISO certified organisation encompassing Quality (ISO 9001), Environmental (ISO 14001), and Health and Safety (ISO 45001). Brand names and logos are registered or unregistered trademarks owned or used under license by Autex Industries Limited or other members of the Autex Group. © Copyright 2022 Autex Industries Ltd. All rights reserved. It is the user's responsibility to determine if the product and information presented in this document is suitable for the intended application by engaging a suitably qualified consultant. The information contained in this document is correct to the best of our knowledge at the date of its publication. To verify that this document is the most current publication please check our website or contact your Autex account manager.