




Tensor[®]

CANISTER TIPS


TOP TIPS

Setting Up Your Canister

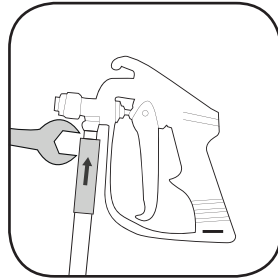

STEP 1

Attach the large end of the hose to the spray gun. Ensure the fitting is tight to prevent leakage.

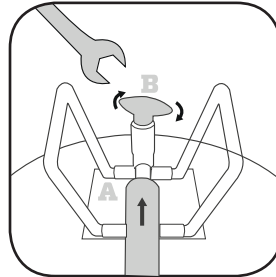


STEP 2

Screw the small end of the hose to canister valve (A). Ensure fitting is tight to prevent leakage.

Twist valve (B) to open the canister. The hose will become pressurised.


Check both fittings for leaks. Tighten to stop leakage.

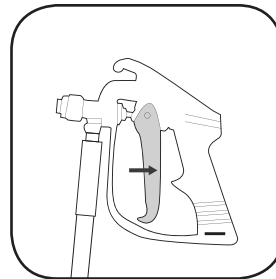

STEP 3

Pull trigger to release air build-up in the hose. This is complete when adhesive begins to spray.

(Note: this will take longer for water-based adhesives)

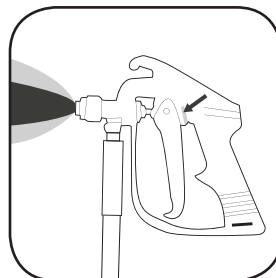

STEP 4

Rotate the locking screw behind the trigger to adjust the spray width.

Hold gun 10-15cm from surface and spray with even coats.

For optimum adhesive performance, please ensure you have the correct gun tip and hose.

A list of corresponding gun tips and hoses for each adhesive is available from the resources section of our website <http://www.tensorglobal.com/australia/resources-and-media/>

Adhesive temperature must remain between 16-27°C while in use.

DO NOT store canisters directly on concrete floor.