



Tensor[®]

APPLICATION TIPS

TOP TIPS


Unlock The Full Potential Of Your Tensor Adhesives

HOW TO SPRAY

When you apply your Tensor adhesive to your substrate there are two things you need to do to get optimum performance from your adhesive.



1. Hold your spray gun at a 90 degree angle to your substrate. This will ensure you get an even coat weight of adhesive. By holding the spray gun at a different angle you may cause thicker and thinner patches of adhesive to form, leading to potential issues with the bond and unsatisfactory finishes.

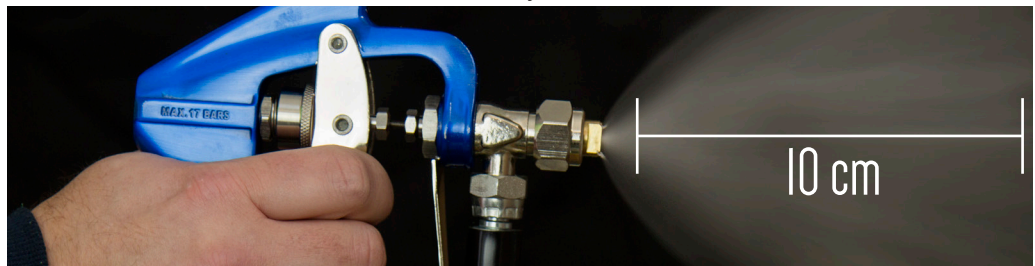

2. Hold your spray gun approx 10 cm from your substrate. This is the optimum distance to achieve even coverage. Holding the gun too close to your substrate will cause heavy build up of adhesive resulting in slower cure times and potential solvent trap. Holding the gun too far from your substrate will cause the adhesive to dry before it hits the substrate, resulting in unsatisfactory bond performance.

MAKE SURE YOU HAVE THE RIGHT TIP

Not all Tensor adhesives require the same spray tip. Whilst you might not think that such a small item can have a great impact on the finished product, the truth is having the right tip for your spray gun is crucial to getting the best performance from your adhesive and optimum coverage.





Tensor[®]

**APPLICATION
TIPS**

TIP CHART

Product	Hose	Tip
Joinery		
L10, L17, L19, L32	Black Rubber	6501
L10N, L17N	Braided Metal	Lechler
L12, L20	Black Rubber	Lechler
L31	Black Rubber	4001 with Pizzler
L71	Moisture Block	Lechler
Foam & Upholstery		
F10	Moisture Block	Lechler
F20, F31, F40, F45	Black Rubber	6501
F30N	Steel Braided	8002
F45N	Steel Braided	8001 With Pizzler
F50	Black Rubber	Lechler
HVAC		
H10N, H11N, H95	Steel Braided	Lechler
H30, H40, H45, H50	Black Rubber	6501
Construction		
X40	Black Rubber	8002
X40N	Steel Braided	8002
C11, C12, C40	Black Rubber	6501
Transportation		
T30	Moisture Block	Lechler
T40, T51	Black Rubber	6501
T53	Black Rubber	Lechler

Product	Hose	Tip
Marine		
M01	Black Rubber	N/A
M30, M31	Black Rubber	8002
M35	Moisture Block	Lechler
M55, M75, M81	Black Rubber	6501
M60	Black Rubber	4001 With Pizzler
M70, M82	Black Rubber	Lechler
Aerospace		
A20	Moisture Block	6501
A30N, A40N	Black Rubber	Lechler
A50	Black Rubber	4001 With Pizzler
A70	Black Rubber	8002




Tensor[®]

**EQUIPMENT
TIPS**

TOP TIPS

Unlock The Full Potential Of Your Tensor Adhesives

DOES YOUR GUN LOOK LIKE THIS?

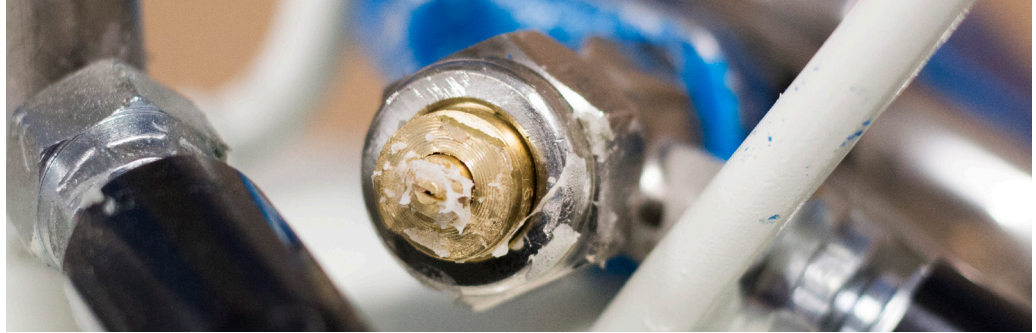

Yes, Then it's time for a clean.